


HES KP20 (Keypad) "Installation"

Stand-alone Cabinet Locking Solutions

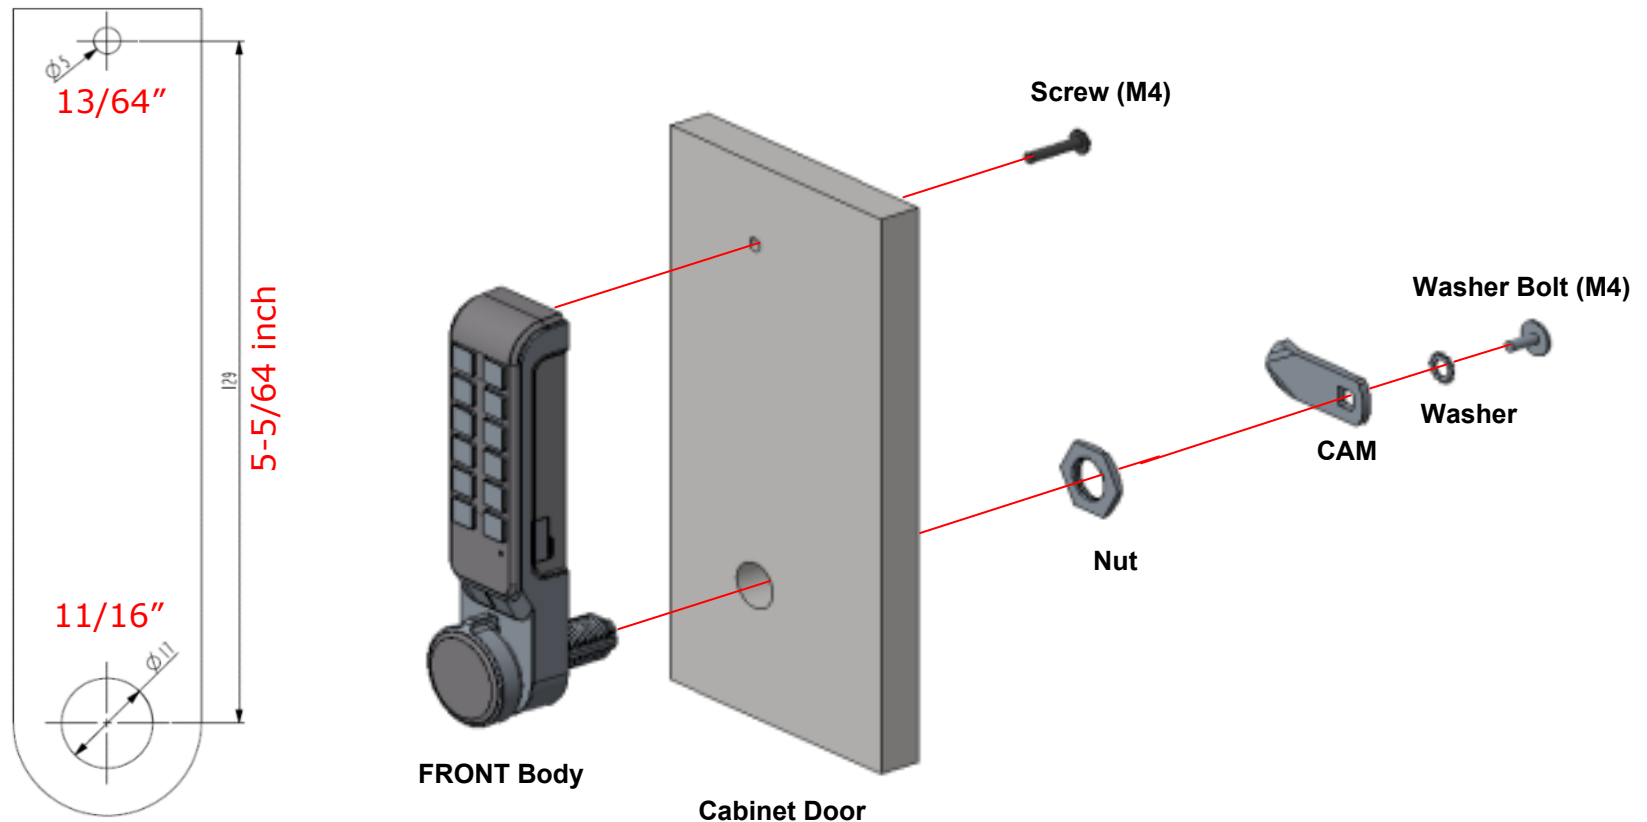

HES KP20 (Keypad) "Changing Batteries"

Stand-alone Cabinet Locking Solutions

How To Change Batteries

1. Remove top screw
2. Loosen locking nut
3. Rotate lock as needed in order to expose the battery compartment on the back side of the lock.
4. Replace batteries
 - 3 x AAA alkaline (1.5V)
 - 30K cycles

