

ARM LOCK

345 Bayview Avenue
Amityville, New York 11701
For Sales and Repairs 1-800-ALA-LOCK
For Technical Service 1-800-645-9440
or visit us at <a href="http://tech.napcosecurity.com/">http://tech.napcosecurity.com/</a>
(Note: Technical Service is for security professionals only)
Publicly traded on NASDAQ Symbol: NSSC

© ALARM LOCK 2013

# Wireless Trilogy® DL6100 & PDL6100 Door Locks **Installation Instructions**

WI1674C 05/13





PDL6100 with Proximity Card Reader

DL6100

Wireless Trilogy Series Network Access Control Systems PDL Series with ProxCard® Access

# **TABLE OF CONTENTS**

Wireless Lock Configuration Overview3	Interchangeable (IC) Locks 8
Ordering Information3	Install Interchangeable (IC) Cores8
Door Preparation4	Changing an Existing IC Core8
Alarm Lock Installation Jig4	Removing the IC Core and Lever9
Latch Installation4	Troubleshooting9
Strike Installation4	Wire Connections9
Lock Preparation4	Wiring and Power Up9
Lock Installation5	Erase All Programming10
Adjusting for Door Thickness5	Battery Replacement10
To Reverse Lever Handing6	Warranty12
Install Inside Trim6	
Attaching Levers and Locksets8	

**Note:** ProxCard<sup>®</sup> and ProxKey<sup>®</sup> are trademarks of the HID<sup>®</sup> Corporation. *Windows* is a registered trademark of the Microsoft Corporation. Other products, product names and services described in this manual are for identification purposes only and may be trademarks of their respective companies.

# WIRELESS LOCK CONFIGURATION OVERVIEW


#### PDL6100 & DL6100

The Trilogy Networx™ PDL6100 and DL6100 series door locks allow you to upload and download programming features *wire-lessly* using a computer connected to a computer network. With "wireless" communication, the various cables and/or AL-DTM Data Transfer Module devices are NOT required to transfer data. With a few clicks of the computer mouse, you can use your computer to retrieve logs, download User Codes and program features into and out of each PDL6100 and DL6100 series wireless door lock in your installation.

DL-Windows software is installed on a computer that is connected to a computer network; connected to this network is an intermediate device called a *Gateway* that communicates to a radio located inside each door lock. In this way, the software allows full programming and control of each lock in the system.

To ensure each physical lock is identified correctly by DL-Windows, the factory assigns each lock a unique serial number; after locks are installed in the doors and the Gateways are mounted, the Gateways search for new locks, allowing them to be enrolled into the system.

For every new wireless lock installed on a door, we recommend that you fill out a new yellow-colored "Lock ID Card" with the location, lock model and serial number. These ID cards are a

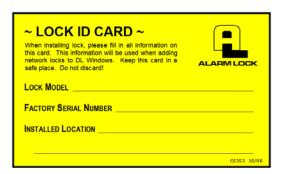

convenient way to keep track of and ensure all locks are enrolled in the DL-Windows Account.

# Flexible Setup

In addition to wireless communication, these wireless door locks can also be programmed at the keypad. This means that locks can be installed on the doors and immediately be put into use via

Small Network Support

Up to 63 locks for each Gateway...

GATEWAY

PC Running
DL-Windows
Software

Router

Router

E X P A N D A B L E

...Up to 32 Gateways

or Windows
for each system

GATEWAY

#32

Lock
#1...

#63

Lock
#63

...Lock
#63

...Lock
#63

...Lock
#83

keypad programming—even before a wireless network is set up. Therefore, you can install the locks on the doors before configuring the wireless network, or you can set up the wireless network first and add locks later. If you wish, you can even start by designing a "virtual" system within DL-Windows (creating new Accounts, adding Users and configuring lock features, etc.), then set up the network and install the lock hardware later. But in the end, after your lock hardware is physically installed and the network is up and running, you can run DL-Windows to link the "virtual" system saved on your computer with the "real" lock hardware on the doors.


**Note:** Keypad programming of User Codes, Features, Time Zones, and Schedules is available as a *temporary* convenience to allow the lock to be put into use before installing and configuring a wireless network. Therefore, all lock programming added via the keypad cannot be retrieved into DL-Windows. If you decide to start programming your wireless lock via the keypad, we recommend you keep hardcopy records (in a secure location) of all Users, their User Codes, and any proximity cards that may have been programmed. Keeping complete and accurate records saves time because after the wireless network is set up, any programming added via the keypad must be re-added to DL-Windows and downloaded back to the lock(s).

# **Ordering Information**

PDL6100/26D - Cylindrical Trilogy<sup>®</sup> Networx<sup>™</sup> Wireless Access Control Lock with built in HID Proximity ID Card Reader, full-metal digital keypad, integral bi-directional radio, 4 C-cell battery-operated (batteries supplied), serial number ID card, standard format SCI keyway for manual key override, 4½ ASA Strike (included).

**DL6100/26D** - Cylindrical Trilogy Networx PIN-Code Wireless Access Control Lock, as above, with full-metal digital keypad only.

This manual includes the hardware installation instructions for the PDL6100 and the DL6100 door locks. The diagrams below detail the typical small and large system configurations.

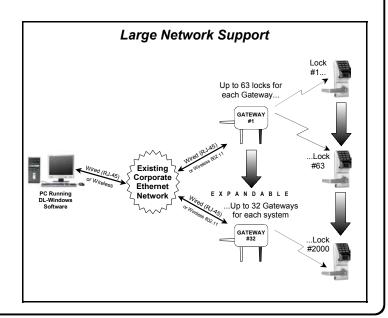

# DOOR PREPARATION

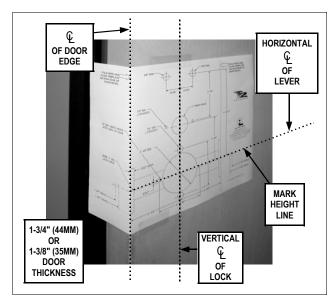


FIG. 1: FOLD AND PLACE TEMPLATE ON DOOR

- Fold and place template on high edge of door at the recommended height from floor. See Fig. 1.
- 2. Mark hole centers on door and door edge.
- 3. Drill 3/8" thru-bolt holes first, then drill 2 1/8" hole.

## For Hardwood Doors:

Notch on both sides of 2 1/8" hole to accommodate mounting plate tabs.

#### **For Hollow Metal Doors:**

Requires horizontal and vertical lock and latch case support (provided by door manufacturer).

**IMPORTANT:** Be sure to remove all metal burrs from connector cable hole—sharp edges will eventually wear away wire insulation.

4. Drill all remaining holes in template as required.

# **ALARM LOCK INSTALLATION JIG**

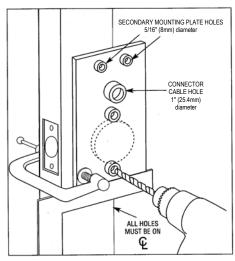


FIG. 2: ALARM LOCK INSTALLATION JIG

1. If 2 1/8" hole already exists, use optional Alarm Lock Installation Jig to ensure accurate locating and drilling of

- 3/8" and 5/16" thru-bolt holes.
- 2. For best results, align the Installation Jig to door with a square and clamp to door before drilling See Fig. 2.

# LATCH INSTALLATION

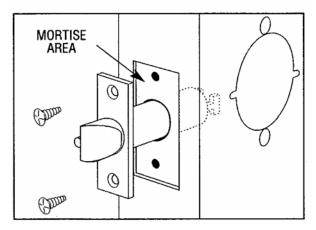


FIG. 3: LATCH INSTALLATION

- 1. Drill 1" diameter hole for latch.
- 2. Mortise for latch front. Insert latch and fasten with two screws supplied.

**Note:** It is important that both 1" and 2 1/8" holes be on the same horizontal center line.

# STRIKE INSTALLATION

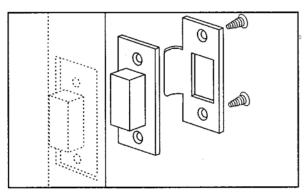


FIG. 4: STRIKE INSTALLATION

- 1. Align strike with latch.
- 2. Trace strike outline on door jamb.
- 3. Mortise jamb and install dust box and strike.

# **LOCK PREPARATION**

Separate the inside housing from the outside housing as follows:

See Fig. 6 for an image of the inside lever catch. Depress the inside lever catch by inserting the lever release pin through the oval hole located in the inside housing and through the small round hole in the lever shaft. While depressing the lever catch, pull off the lever (jiggle lever if needed).

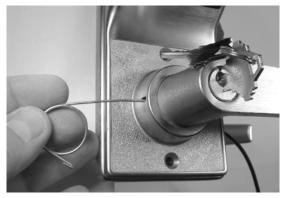


FIG. 5: INSERT LEVER RELEASE PIN TO DEPRESS THE LEVER CATCH

Depressing this lever catch also allows the inside housing to be separated from the outside housing. Use a small screwdriver to depress the lever catch (the lever catch is circled in Fig. 6) and pull the inside housing away from the outside housing.



FIG. 6: PUSH IN LEVER CATCH

# LOCK INSTALLATION INSTALL OUTSIDE LOCK BODY

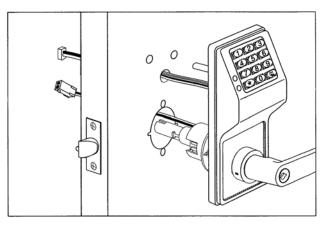


FIG. 7: INSTALL OUTSIDE LOCK BODY (Lever, Housing & Lock body)

- 1. Insert motor wire plug through the large 2 1/8" hole and the ribbon cable through the 1" hole as shown in Fig. 7.
- 2. Insert outside lock body into door and be sure to properly engage the lock body with the latch as shown in Fig. 8.

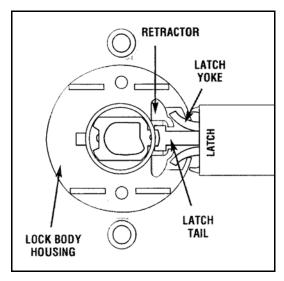


FIG. 8: VIEW FROM INSIDE OF DOOR

The latch yoke must engage the lock body housing and the tailpiece must engage the retractor.

# **ADJUSTING FOR DOOR THICKNESS**

Plastic spacers either add or subtract the distance between the rose plates. Each spacer represents 1/8" of door thickness. Locks are factory assembled for 1 3/4" thick doors using 3 plastic spacers.

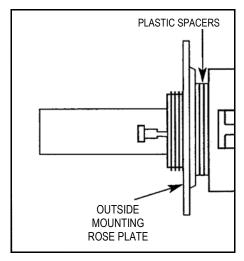


FIG. 9: ADJUST DOOR THICKNESS

#### For other door thicknesses:

- Remove outside lever as follows: Insert key into outside cylinder, turn clockwise 45 degrees. Depress the outside lever catch by inserting the lever release pin through the oval hole located in the outside housing and through the small round hole in the lever shaft. While depressing the lever catch, pull off the lever (jiggle lever if needed).
- 2. Remove outside housing and unscrew outside rose
  - For 1 5/8" door, remove one plastic spacer. For 1 7/8" door, add one plastic spacer.
- 3. Screw mounting rose plate up to the spacers.
- 4. Reassemble outside housing and lever.

For other door thicknesses, consult factory.

# TO REVERSE LEVER HANDING

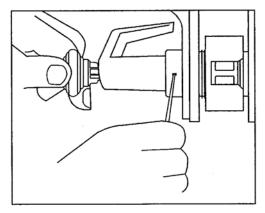


FIG. 10: REVERSE LEVER HANDING

With the inside lever and housing off:

- 1. Insert key into outside cylinder, turn clockwise 45 degrees and depress the lever catch. Pull lever off.
- Use the outside spindle to rotate the lock body 180 degrees. Be sure lever catch (shown in Fig. 6) faces the door edge. If necessary, depress the lever catch to allow the outside spindle to rotate 180 degrees.
- With key in cylinder untouched (still at 45 degrees clockwise), position lever on spindle and press until lever catch engages. Remove key and test lever for proper engagement by turning and pulling. For IC models, see Fig. 20.

# **INSTALL INSIDE TRIM**

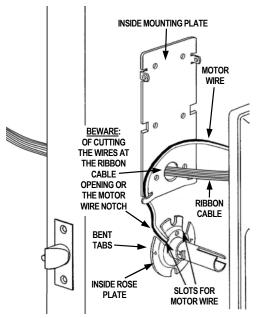


FIG. 11: INSTALL INSIDE TRIM

1. Place the inside rose plate over spindle and on door. Align the two slots with the two 3/8" holes in door (the rose plate is marked with "TOP", circled in Fig. 12) and

the bent tabs facing door (the bent tabs bite into wooden doors, preventing their rotation; for metal doors, drill small holes to allow the rose plate to sit flush against door). Fasten with two 8-32 x 1 1/4 Phillips pan head screws through the inside rose, engaging the outside lock body. Do not over-tighten.



FIG. 12: INSIDE ROSE PLATE INSTALLATION

2. Position inside mounting plate and pull the ribbon cable through the mounting plate opening—be sure not to pinch or cut the wires. Fasten inside mounting plate with two 6 x ¾ flat head sheet metal screws and two 8-32 x 1 flat head machine screws as shown in Fig 13 (do not over-tighten). The two bottom screws are optional. Note: Be sure the mounting plate is perfectly vertical before installing sheet metal screws. See Fig. 13 for screw locations. Note: As you tighten the screws, the inside mounting plate pulls in and secures the outside lock body to the door.

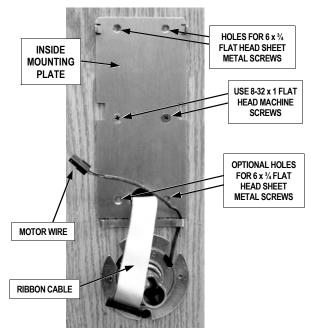


FIG. 13: INSIDE MOUNTING PLATE INSTALLATION

**IMPORTANT:** See Fig. 11 and 13: The motor wire must come through either slot and be secured by the

motor cable notch without pinching or cutting the wire.

3. See Fig. 14. Before placing the inside housing onto the lock, plug the ribbon cable and the motor wire into their receptacles on the inside housing circuit board. Note: These plugs and sockets fit only one way--do not force them. Seal the connectors with dielectric grease (included). Do not allow the wires to cross or lay on top of each other. Jiggle the connector cable to be sure the wire opening does not pinch wires before fastening bolts.

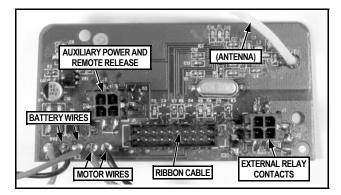


FIG. 14: RECEPTACLES LOCATED IN THE INSIDE HOUSING

4. Place inside housing over the spindle (see Fig. 15). Depress the lever catch (use a screwdriver pointed inside the spindle) and push housing flush against door. Be sure that all wires are through the housing before tightening the two 10-32 x 2 1/4" thru-bolts.



FIG. 15: TIGHTEN THRU-BOLTS

5. Secure the top of the inside housing to the inside mounting plate with two black 4-40 x ½ flat head Phillips or spanner head security screws. See Fig. 16.



FIG. 16: SECURE TOP OF INSIDE HOUSING

 Plug the battery connector into its receptacle. See Fig. 17. Upon connection of the battery pack, you will hear three beeps.

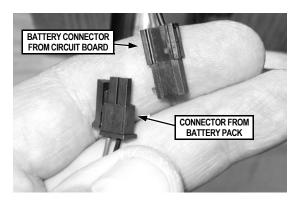


FIG. 17: CONNECT THE BATTERY PACK

7. Insert the battery pack into inside housing as shown in Fig. 18.



FIG. 18: INSERT BATTERY PACK INTO HOUSING

8. Secure the battery cover to the inside housing with two black 4-40 x ¼ flat head Phillips or spanner head security screws. See Fig. 19.



FIG. 19: SECURE BATTERY COVER

# 9. ATTACHING LEVERS AND LOCKSETS

# Interchangeable Core (IC) Models:

Skip to the section, "INTERCHANGEABLE (IC) LOCKS" below.

# **Standard Levers and Cylinders:**

Standard levers and standard lock cylinders are both included in non-IC lock models.

a. Install the tailpiece, cylinder retainer and cylinder into the standard lever as shown in Fig. 20.

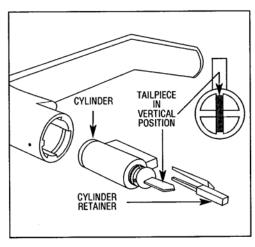


FIG. 20: STANDARD CYLINDER-LEVER, TAILPIECE AND RETAINER.

- b. Attach the primary side lever by first inserting the metal key into the primary side lock cylinder and turning the key 45° in either direction.
- c. Insert the lever on the spindle and push the lever in until it engages with the lever catch (it may be necessary to turn the key back and forth while installing the lever).
- d. Install the secondary side lever in the same manner as the primary.
- d. Test both levers to be sure they are on securely and operate without binding. Be sure the primary side key retracts the latch when the key is turned in either direction.

BE SURE TO TEST THE LEVERS AND CYLINDERS FOR PROPER OPERATION BEFORE CLOSING DOOR.

# INTERCHANGEABLE (IC) LOCKS

Interchangeable (IC) cores require special levers. If necessary, remove both the primary and secondary standard levers (with their standard cylinders) before proceeding. (To remove standard primary or secondary levers, insert key into cylinder, turn key 45° in either direction, depress the lever catch and pull off lever).

Interchangeable (IC) cores and their specialized levers are both available from your Alarm Lock dealer.

# **INSTALL INTERCHANGEABLE (IC) CORES**

1. Insert primary side IC lever on spindle and push in until it engages with the lever catch.

- 2. Insert control key in primary side core and turn clockwise.
- Insert IC core tailpiece (shown in Fig. 21 and Fig. 22) into primary side core. Note: With the PDL/DL6100 locks, tailpieces are used in primary side cores only. Use ONLY an Alarm Lock<sup>®</sup> IC core tailpiece.
- 4. With control key in primary side core, insert core fully into lever.
- 5. Turn key counterclockwise and remove control key.

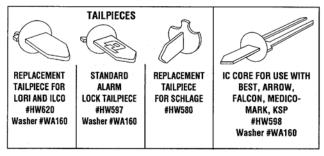


FIG. 21: STANDARD AND IC CORE TAILPIECE VARIETIES

- 6. Insert secondary side IC lever on spindle and push in until it engages with the lever catch.
- Insert control key in secondary side core and turn clockwise. Do NOT insert tailpiece into secondary side core.
- 8. With control key in secondary side core, insert core fully into lock.
- 9. Turn key counterclockwise and remove key.

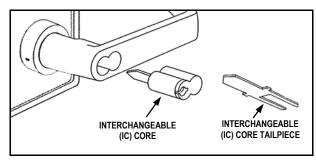


FIG. 22: INSTALL INTERCHANGEABLE (IC) CORE

#### CHANGING AN EXISTING IC CORE

- Remove the existing primary side IC core by inserting its control key, then turning the key clockwise and pulling the key to remove the core. Set core aside.
- 2. Insert Alarm Lock tailpiece with washer into new core.
- 3. Insert new control key into new core, turn clockwise.
- 4. Insert new core into lever and turn key counterclockwise to lock in position.
- 5. Remove new control key.
- 6. Remove the existing secondary side IC core by inserting its control key, then turning the key clockwise and pulling the key to remove the core. Set core aside.
- 7. Do NOT insert a tailpiece. Insert new control key into new core, turn clockwise.
- 8. Insert new core into lever and turn key counterclockwise to lock in position.
- 9. Remove new control key.

# REMOVING THE IC CORE & LEVER

- 1. Remove the existing primary or secondary IC core by inserting the control key, then turning the key clockwise and pulling the key to remove the core.
- 2. Use a screwdriver to push inside of lever catch to the side (see Fig. 23). Pull off the IC lever.

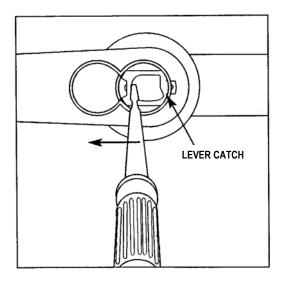


FIG. 23: REMOVING THE IC CORE LEVER

# **PROGRAMMING**

Your lock can be programmed (and re-programmed again and again) to suit your changing requirements. Instead of distributing metal keys, distribute *User Codes --* and delete them from the lock software (also called *firmware*) when needed. To program your DL/PDL6100 lock, see the lock programming instructions.

# **TROUBLESHOOTING**

## **Electronic Trouble:**

Lock incorrectly operates in reverse.

• Solution: Reverse motor wires in connector.

Lock will not accept new codes during programming.

• **Solution:** Disconnect battery connector, hold down any button until lock resets, then reconnect and start programming again.

Lock drains batteries quickly.

• **Solution:** Check all wires for pinching or cutting. Check for water damage. If condition persists, consult factory.

Lock is inoperative.

• **Solution:** Check batteries for proper polarity and check for cut wires.

Lock sounds "pulsing beeps" (with red flickering LED) during lock operation.

• Solution: Low battery signal - replace batteries.

# **Mechanical Trouble:**

Lever pulls off.

 Lever Catch not fully engaged. Lock is not centered on door. Door too thick. (See Fig. 9). Unable to assemble outside lever.

 Key and tailpiece orientation are incorrect (See Fig. 21 and 22).


Latch will not fully retract.

• Lock is not properly engaged with latch or misaligned. Lock is not centered on door (See Fig. 8).

Key binds in lock.

• Lever Catch not fully engaged. Lock is not centered on door. Check for proper tailpiece and proper orientation of tailpiece (See Fig. 21 and 22).

# **WIRE CONNECTIONS**

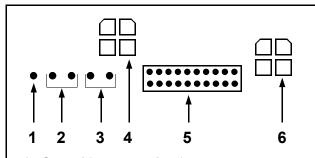

- 1. Ground (no connections)
- 2. Battery Wires
- 3. Motor Wire
- 4. Auxiliary Power / Remote Release Wire colors in supplied plug are as follows:

Auxiliary Power: Red: 6-9VDC Black: Ground

Remote Release:

Two white wires; short to activate.

- 5. Ribbon Cable
- 6. External Relay Contacts

FIG. 24: WIRE CONNECTIONS

# **WIRING AND POWER UP**

# **External Power:**

Red / Black wires - External 7.5 VDC Power Source must be used for operation without batteries.

#### Remote Input:

White / White wires - Wire a Normally Open Contact to wires (white and white). Momentarily close to allow person to pass through door. **NOTE:** Remote Input is enabled from the factory. (See the lock programming instructions for more information).

# Relay:

COM-Orange / NO-Green / NC-Yellow - See Function 67 in the programming instructions for programming options for the Relay.

# Wiring to Disarm a Burglary Control Panel:

See the programming instructions WI1790 for additional information.

# **POWER UP**

#### **FIRST TIME**

 When applying power to the lock for the first time, stop and follow the procedure outlined in the Programming Instructions (for the DL6100, see WI1820; for the PDL6100, see WI1790). With either manual, the procedure is located in the Quick Start, First time Power Up section.

#### **POWER RE-APPLIED**

- When power is re-applied to a lock that was already operational, proceed as follows:
- 1. Disconnect battery pack connector.
- With battery power disconnected, press and hold down for 10 seconds to insure discharge of all capacitors.
- 3. Re-connect battery pack (lock will sound 3 short beeps). If beeps are not heard, then restart at step 1.
- 4. Do not press any keys for 15 seconds.
- 5. After 15 seconds, the LED will flash red 6 times and 6 beeps will sound.

The lock is now ready for use. The pre-existing program is loaded from fixed memory. Set the clock using functions 38, 39 and 40.

# **ERASE ALL PROGRAMMING**

(The "out of box" factory default will be loaded)

- 1. Remove the battery pack.
- With battery power disconnected, press and hold down for 10 seconds to ensure discharge of all capacitors.
- 3. Re-install the battery pack (lock will sound 3 short beeps). If beeps are not heard, then restart at step 1.
- 4. Within 5 seconds after hearing the 3 short beeps, press and hold until the lock begins to beep, then release.
- A series of 5 RED LED and 5 beeps will be heard followed by 10 seconds of silence, then 3 GREEN LED's and 3 fast beeps.


All settings and programming have been erased and the lock is now ready for use. **Note:** All lock programming can also be erased (without need to disconnect the batteries) by entering Function 99.

# **BATTERY REPLACEMENT**

When a valid code is entered and the batteries are weak, the red LED will light when the keys are pressed and the sounder will sound steady for the duration of the Pass Time. For models with a replacable battery pack, use four (4) C-size 1.5 volt alkaline batteries. For models with a sealed battery pack, contact your Alarm Lock dealer for a replacement battery pack. Always replace weak batteries as soon as possible.

<u>CAUTION:</u> Do not press any keys while batteries are <u>disconnected or you may erase the real-time clock</u> settings.

- 1. At the back of the lock, remove the screw at the bottom of the lock housing and remove the cover.
- 2. Pull out the battery pack and quickly replace all 4 batteries within 1 minute. For models with the sealed battery pack, simply unplug the old battery pack and plug in the new battery pack.
- 3. If you **do not** hear the 3 beeps when power is reapplied, all programming and settings have been retained, and the lock is ready for use. Go to step 5.
- 4. If you do hear 3 beeps when power is re-applied, do not press any keys for 15 seconds. After the 15 second period, the LED will flash red 6 times and 6 beeps will sound. Reset the clock using functions 38, 39 and 40.
- 5. Replace the cover and tighten the screw.

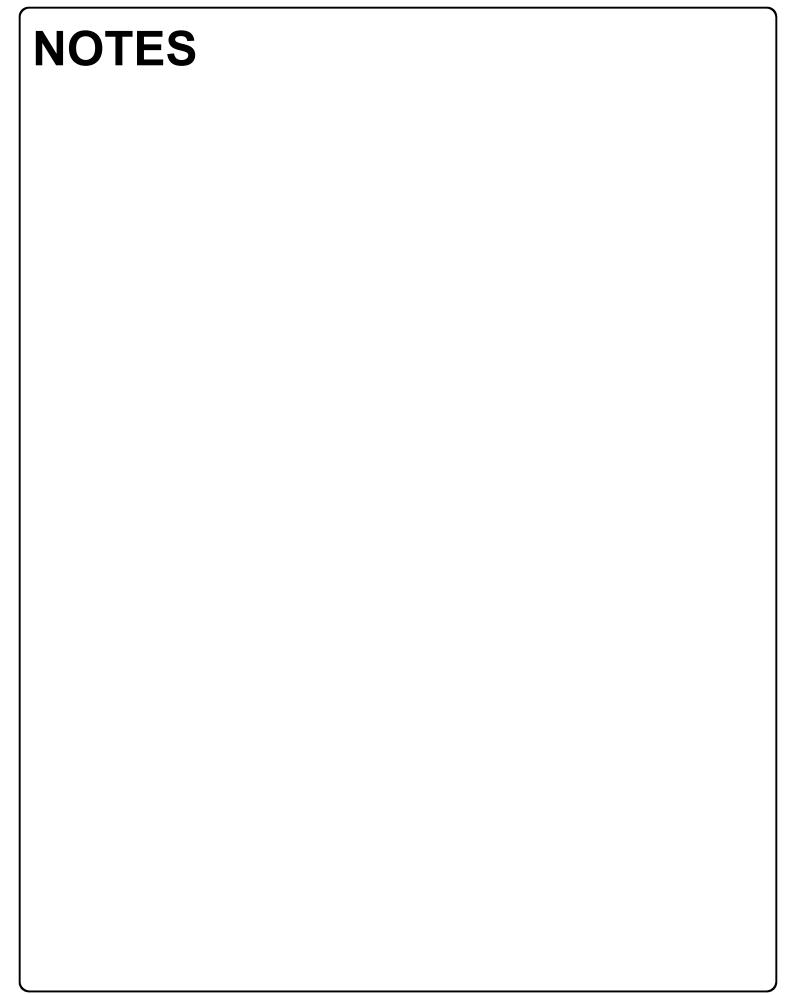

# ALARM LOCK LIMITED WARRANTY

ALARM LOCK SYSTEMS, INC. (ALARM LOCK) warrants its products to be free from manufacturing defects in materials and workmanship for twenty four months following the date of manufacture. ALARM LOCK will, within said period, at its option, repair or replace any product failing to operate correctly without charge to the original purchaser or user.

This warranty shall not apply to any equipment, or any part thereof, which has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to acts of God, or on which any serial numbers have been altered, defaced or removed. Seller will not be responsible for any dismantling or reinstallation charges, environmental wear and tear, normal maintenance expenses, or shipping and freight expenses required to return products to ALARM LOCK. Additionally, this warranty shall not cover scratches, abrasions or deterioration due to the use of paints, solvents or other chemicals.

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. THERE IS NO EXPRESS OR IMPLIED WARRANTY OF MERCHANTABILITY OR A WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. ADDITIONALLY, THIS WARRANTY IS IN LIEU OF ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF ALARM LOCK.

Any action for breach of warranty, including but not limited to any implied warranty of merchantability, must be brought within the six months following the end of the warranty period.

IN NO CASE SHALL ALARM LOCK BE LIABLE TO ANYONE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, EVEN IF THE LOSS OR DAMAGE IS CAUSED BY THE SELLER'S OWN NEGLIGENCE OR FAULT.

In case of defect, contact the security professional who installed and maintains your security system. In order to exercise the warranty, the product must be returned by the security professional, shipping costs prepaid and insured to ALARM LOCK. After repair or replacement, ALARM LOCK assumes the cost of returning products under warranty. ALARM LOCK shall have no obligation under this warranty, or otherwise, if the product has been repaired by others, improperly installed, improperly used, abused, altered, damaged, subjected to accident, nuisance, flood, fire or acts of God, or on which any serial numbers have been altered, defaced or removed. ALARM LOCK will not be responsible for any dismantling, reassembly or reinstallation charges, environmental wear and tear, normal maintenance expenses, or shipping and freight expenses required to return products to ALARM LOCK. Additionally, this warranty shall not cover scratches, abrasions or deterioration due to the use of paints, solvents or other chemicals.

This warranty contains the entire warranty. It is the sole warranty and any prior agreements or representations, whether oral or written, are either merged herein or are expressly cancelled. ALARM LOCK neither assumes, nor authorizes any other person purporting to act on its behalf to modify, to change, or to assume for it, any other warranty or liability concerning its products.

In no event shall ALARM LOCK be liable for an amount in excess of ALARM LOCK's original selling price of the product, for any loss or damage, whether direct, indirect, incidental, consequential, or otherwise arising out of any failure of the product. Seller's warranty, as hereinabove set forth, shall not be enlarged, diminished or affected by and no obligation or liability shall arise or grow out of Seller's rendering of technical advice or service in connection with Buyer's order of the goods furnished hereunder.

ALARM LOCK RECOMMENDS THAT THE ENTIRE SYSTEM BE COMPLETELY TESTED WEEKLY.

Warning: Despite frequent testing, and due to, but not limited to, any or all of the following; criminal tampering, electrical or communications disruption, it is possible for the system to fail to perform as expected. ALARM LOCK does not represent that the product/system may not be compromised or circumvented; or that the product or system will prevent any personal injury or property loss by burglary, robbery, fire or otherwise; nor that the product or system will in all cases provide adequate warning or protection. A properly installed and maintained alarm may only reduce risk of burglary, robbery, fire or otherwise but it is not insurance or a guarantee that these events will not occur. CONSEQUENTLY, SELLER SHALL HAVE NO LIABILITY FOR ANY PERSONAL INJURY, PROPERTY DAMAGE, OR OTHER LOSS BASED ON A CLAIM THE PRODUCT FAILED TO GIVE WARNING. Therefore, the installer should in turn advise the consumer to take any and all precautions for his or her safety including, but not limited to, fleeing the premises and calling police or fire department. in order to mitigate the possibilities of harm and/or dam-

ALARM LOCK is not an insurer of either the property or safety of the user's family or employees, and limits its liability for any loss or damage including incidental or consequential damages to ALARM LOCK's original selling price of the product regardless of the cause of such loss or damage.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, or differentiate in their treatment of limitations of liability for ordinary or gross negligence, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.