





0563 / 0563LM TEMPLATE

O SERIES SURFACE MOUNTED RIM STRIKE

INSTRUCTIONS

1. Determine the horizontal centerline of the exit device latch and transfer centerline to the frame stop.
2. Position the template onto the frame aligning with centerline and against the closed door. Center-punch the two mounting holes and the wire access hole(s) as shown.
3. Drill and tap the two mounting holes and drill the wire access hole(s).
4. Refer to the installation instructions for wiring and final installation.

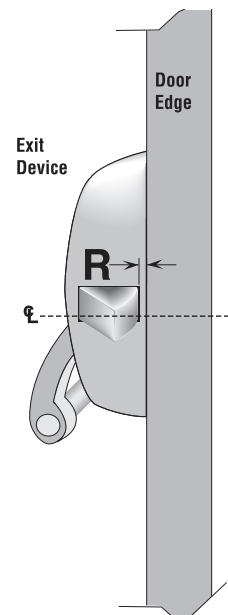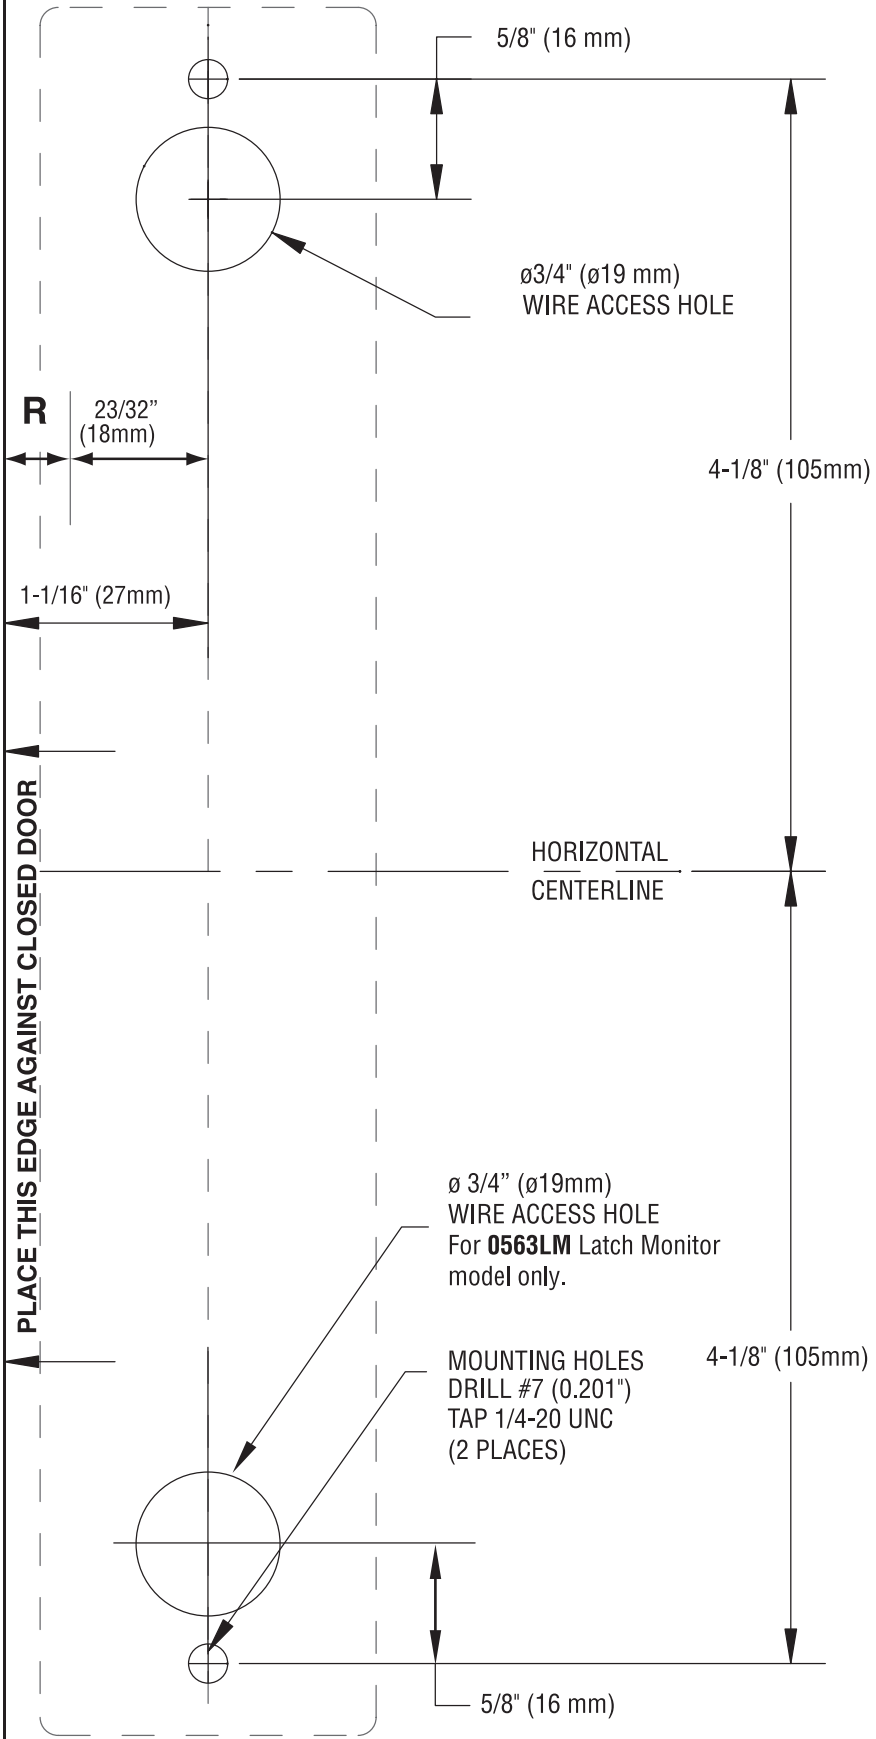

For those exit devices where **R ≠ 11/32" (9mm)** shift template accordingly.

T0563

© 2017 RUTHERFORD CONTROLS INT'L | dormakaba Group
 WWW.RUTHERFORDCONTROLS.COM • PHONE: 1.800.265.6630 • FAX: 1.800.482.9795
 E-MAIL: SALES@RUTHERFORDCONTROLS.COM

PCN16045
 R05/17TG

