


DM62 SERIES DOUBLE MAGNALOCK INSTALLATION TEMPLATE

DO NOT PHOTOCOPY THIS TEMPLATE!!! – (SCALE MAY BE AFFECTED)

!!! WARNING: DO NOT DRILL INTO MAGNET OR STRIKE FOR ANY REASON !!!

1. Cut or fold sheet 2 along the indicated vertical line.
2. Place the vertical cut/fold line of sheet 2 on top of sheet 1 aligning it to the vertical printed line indicated. Ensure that the horizontal "HEADER LINE" of each sheet is aligned and then tape sheets together.
3. Fold the taped template along the HEADER LINE. Center the template between doors and orient with the lock mounting holes against the door frame header and the strike mounting holes against the door surface.

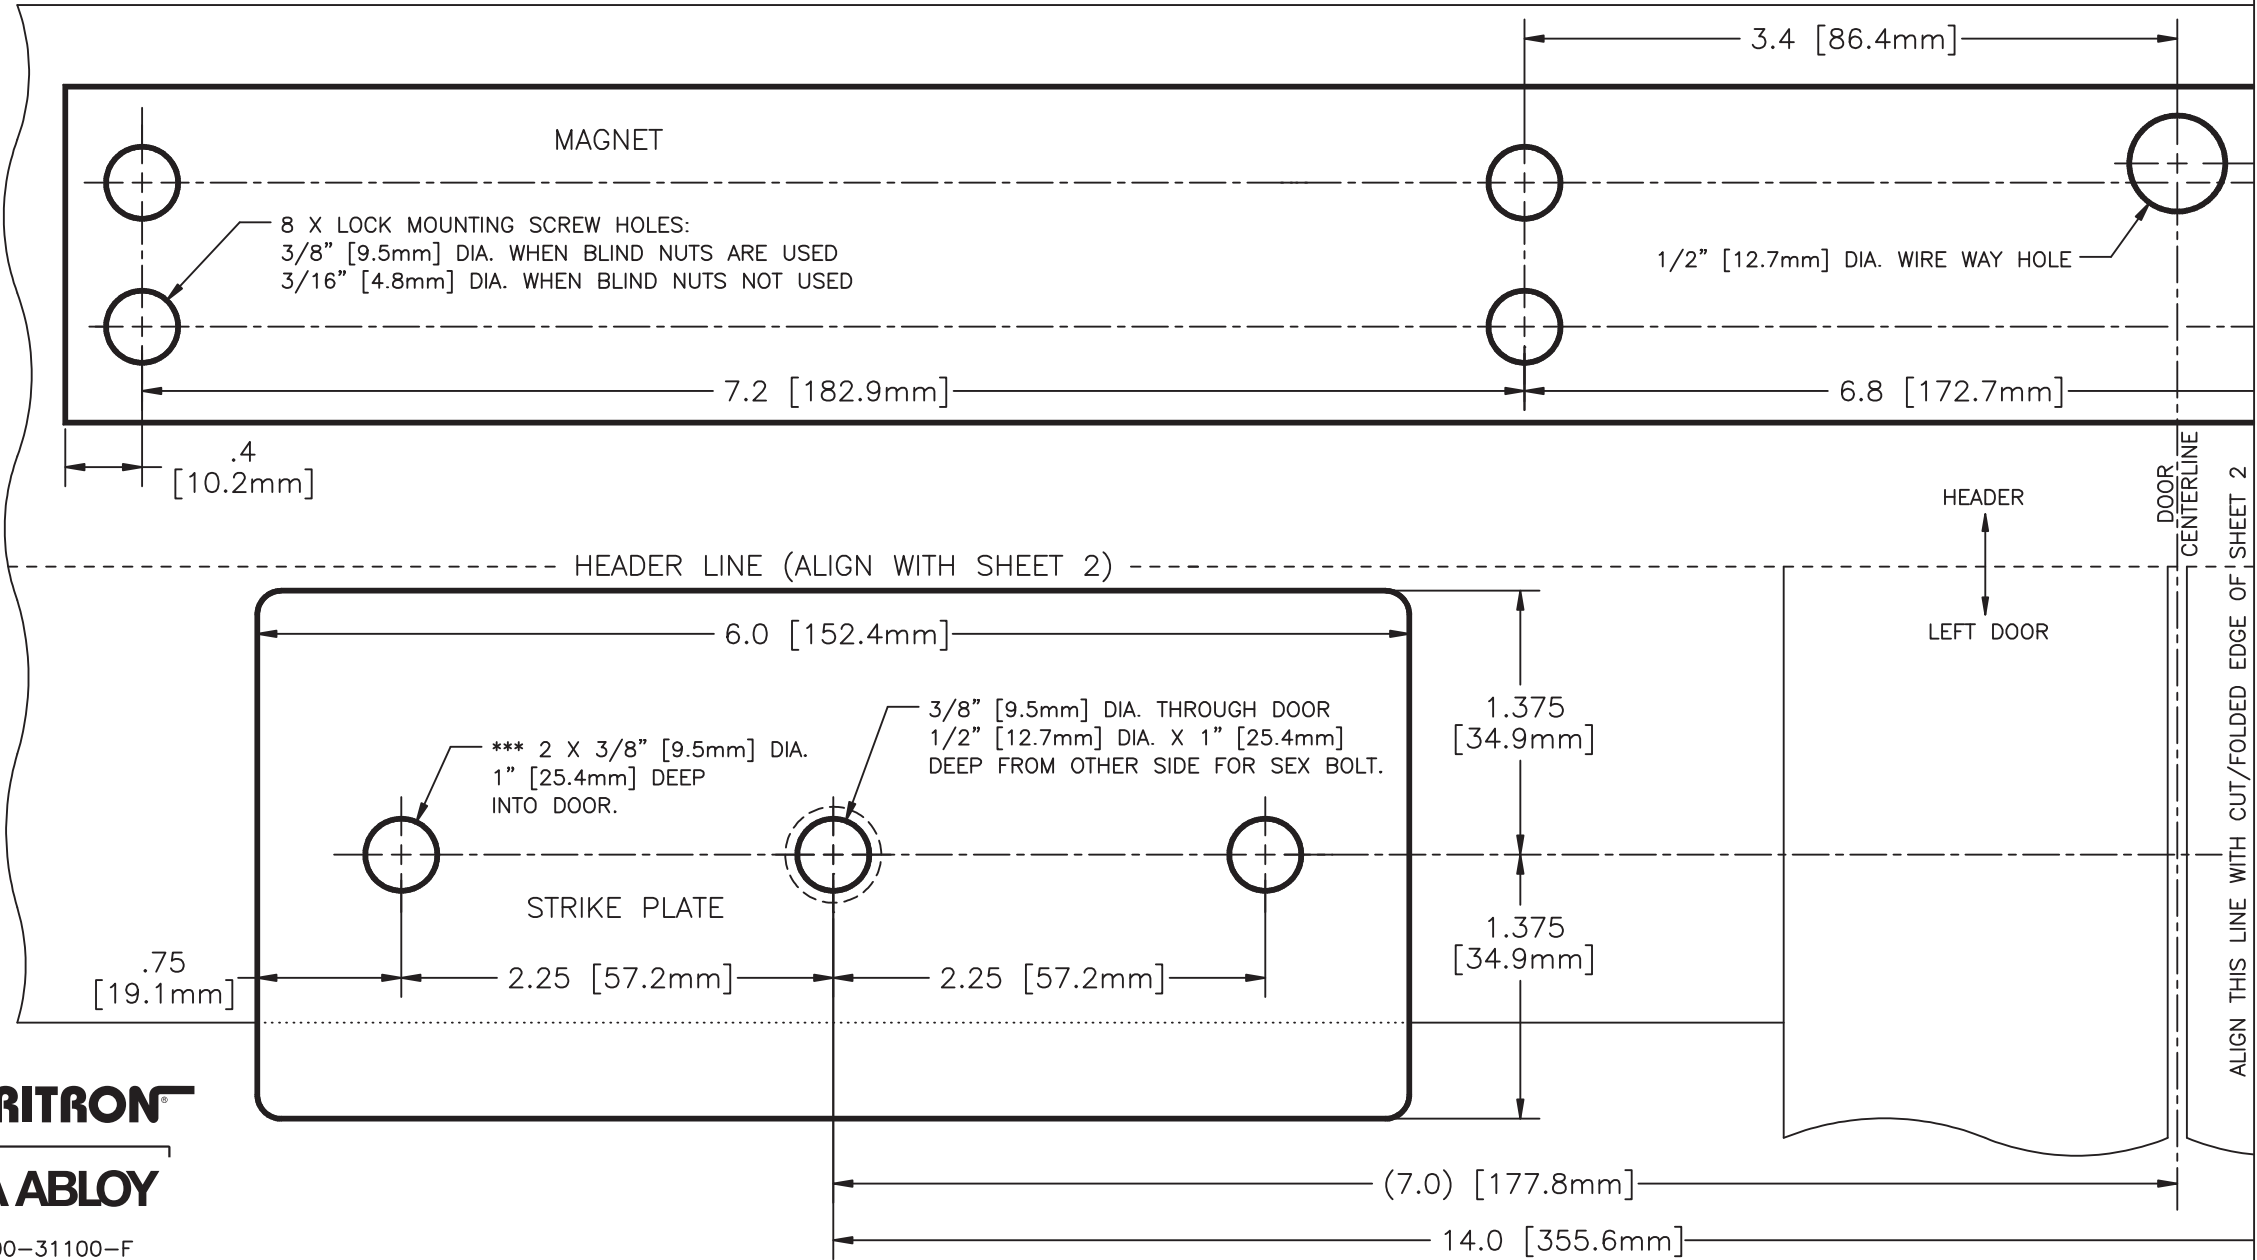

SECURITRON

ASSA ABLOY

P/N 500-31100-F
(Sheet 1 of 2)