



Template For SAM2 Series – Magnalock

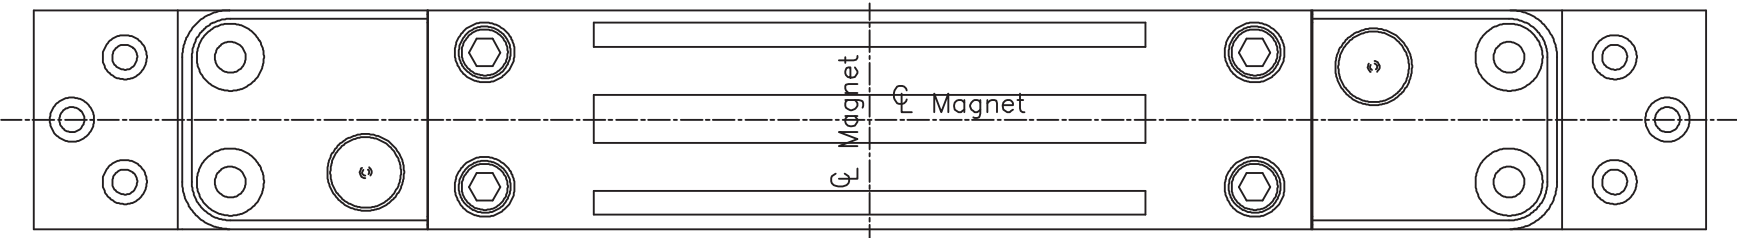


--- Magnet Body Top Assembly View – For: Reference Only! ---

2X Cut Out this Area for
Lock Bracket Mounting.
Note: Depth for Mounting is
to be 1/16" [1,6] Deep.

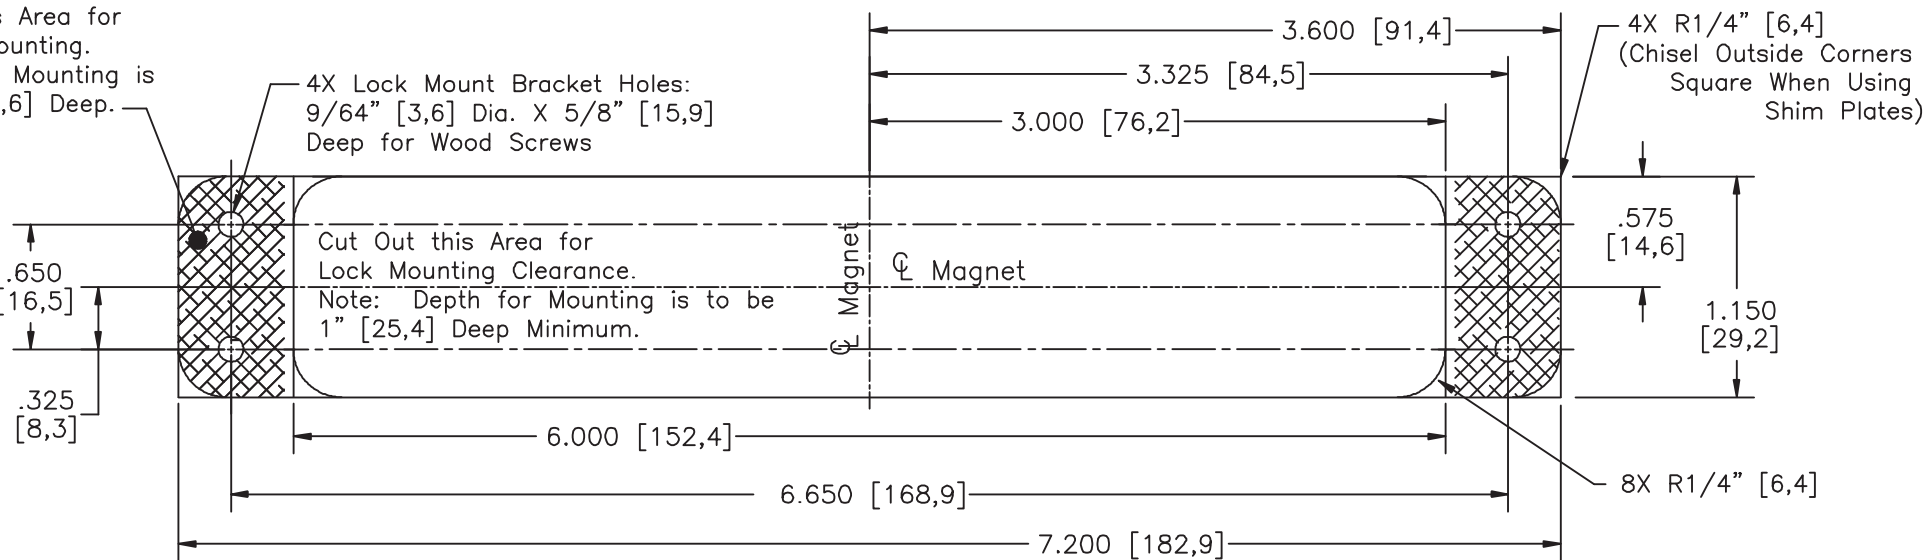

SOLID WOOD TYPE FRAME
Flush Mount Brackets Not Used

6X Flush Mount Bracket Holes:
3/16" [4,8] Dia. Thru & Countersink
to 11/32" [8,7] Major Dia.
for Flat Head Machine Screws

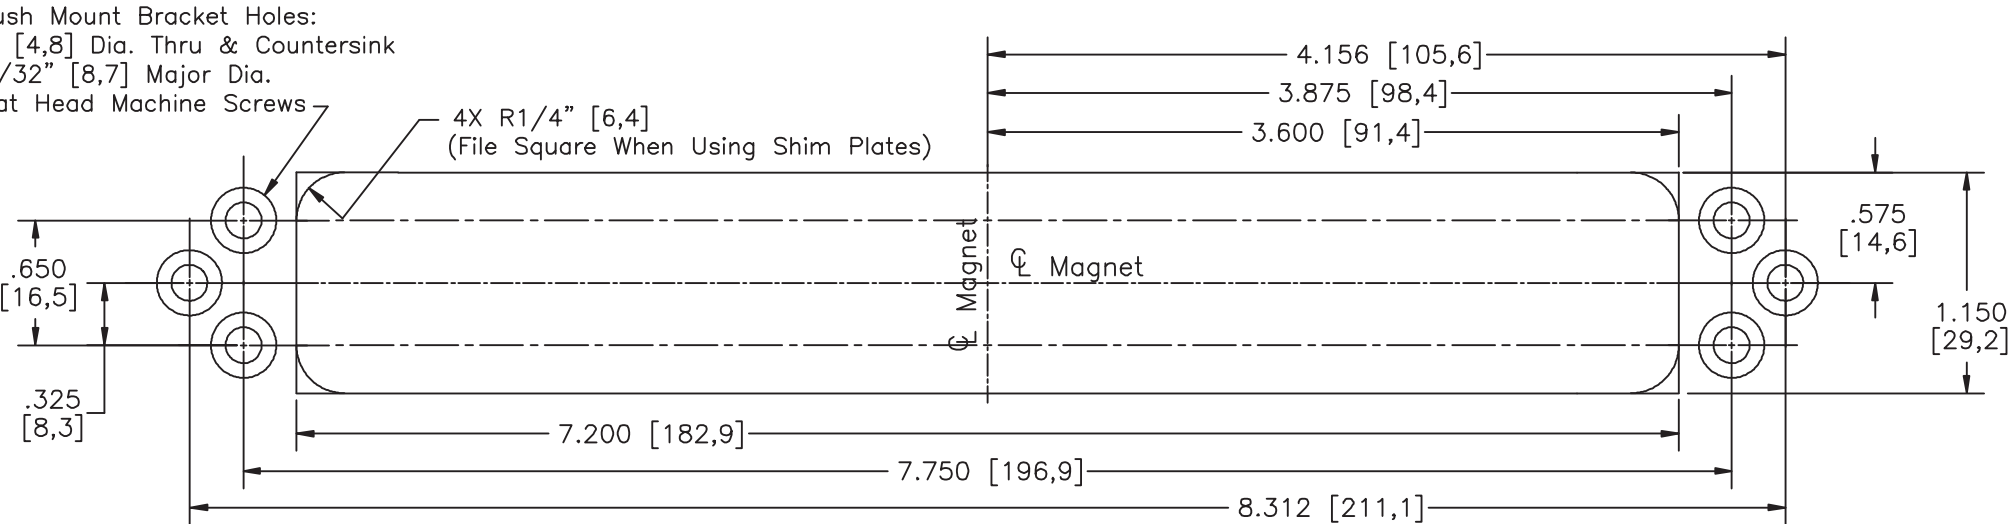


HOLLOW METAL AND ALUMINUM / STEEL TYPE FRAMES
Flush Mount Brackets Used


DIMENSIONS WITHIN BRACKETS [XX,X] REPRESENT METRIC MEASUREMENT IN MILLIMETERS

DO NOT PHOTOCOPY TEMPLATE (scale may be affected)


Template For SAM2 Series – Strike Assembly

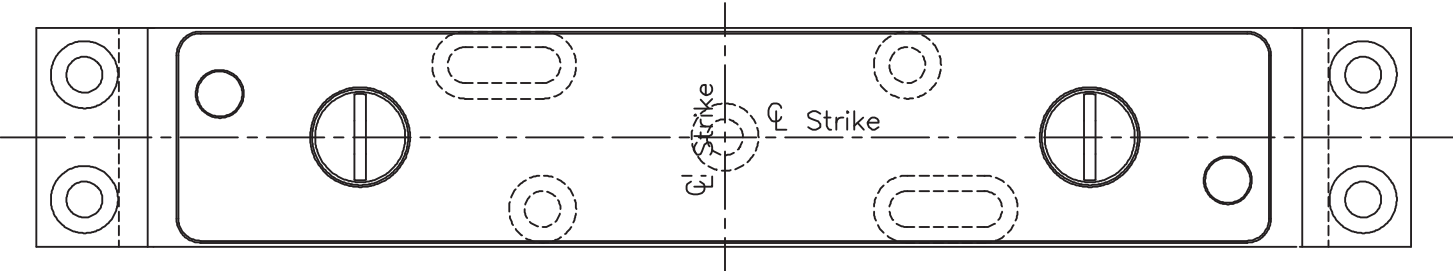

Strike Top Assembly View – For: Reference Only!

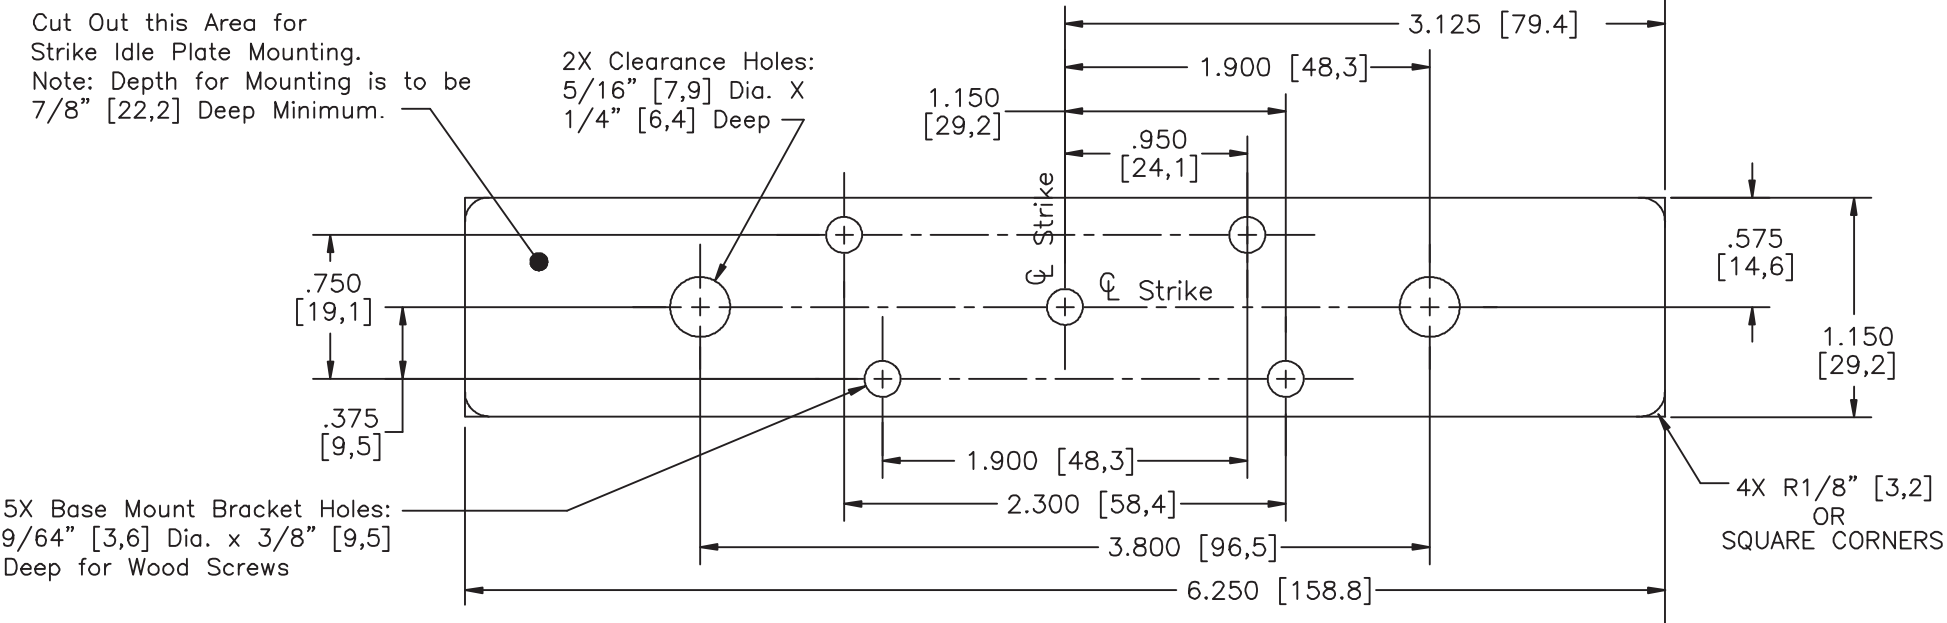

HARD CORE WOOD TYPE DOOR
End Mounting Brackets Not Used


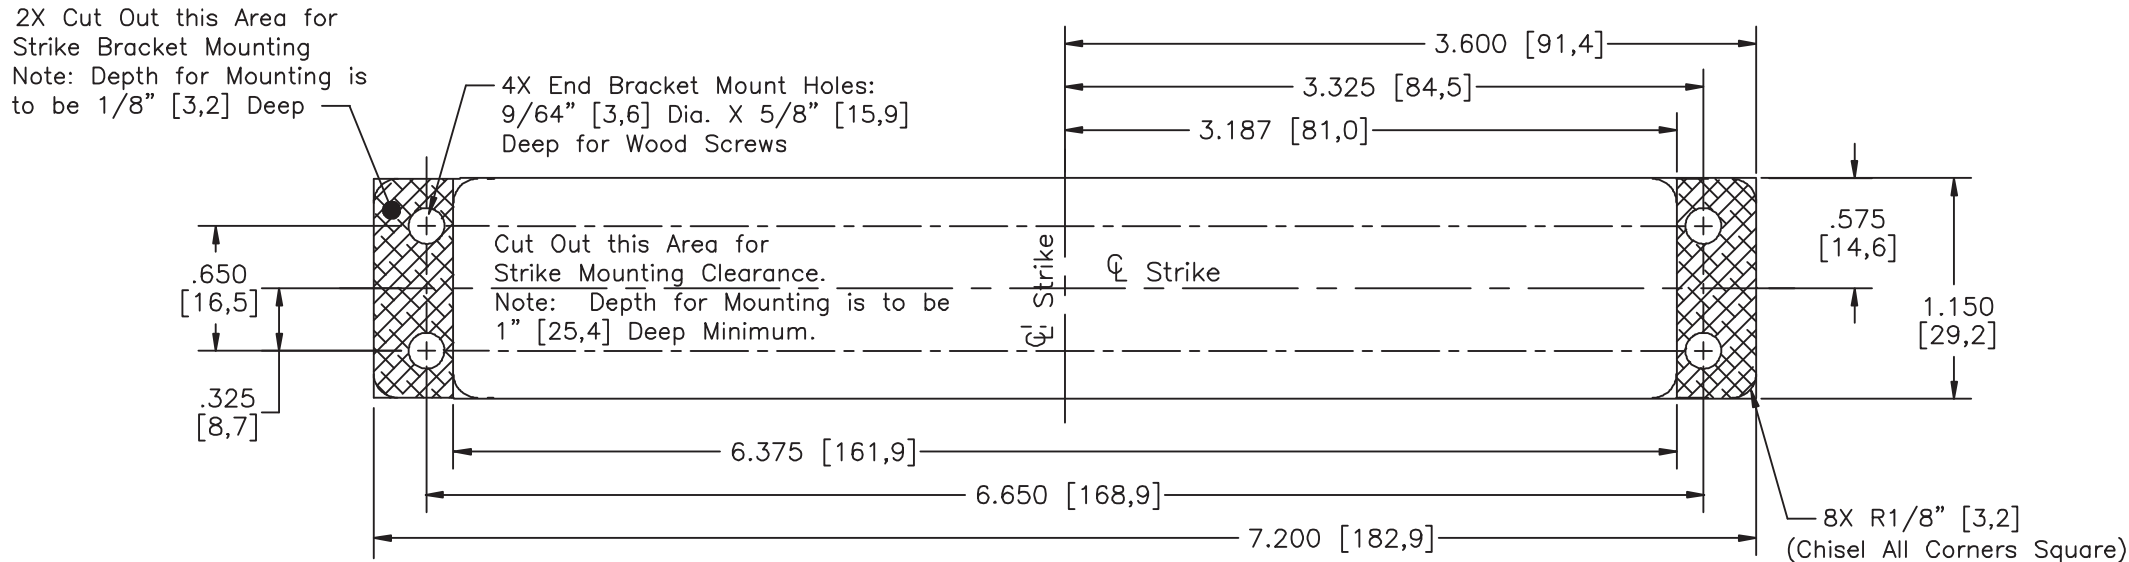


HARD AND SOFT CORE TYPE WOOD DOOR
End Mounting Brackets Used

DIMENSIONS WITHIN BRACKETS [XX,X] REPRESENT METRIC MEASUREMENT IN MILLIMETERS

DO NOT PHOTOCOPY TEMPLATE (scale may be affected)

Template For SAM2 Series – Strike Assembly

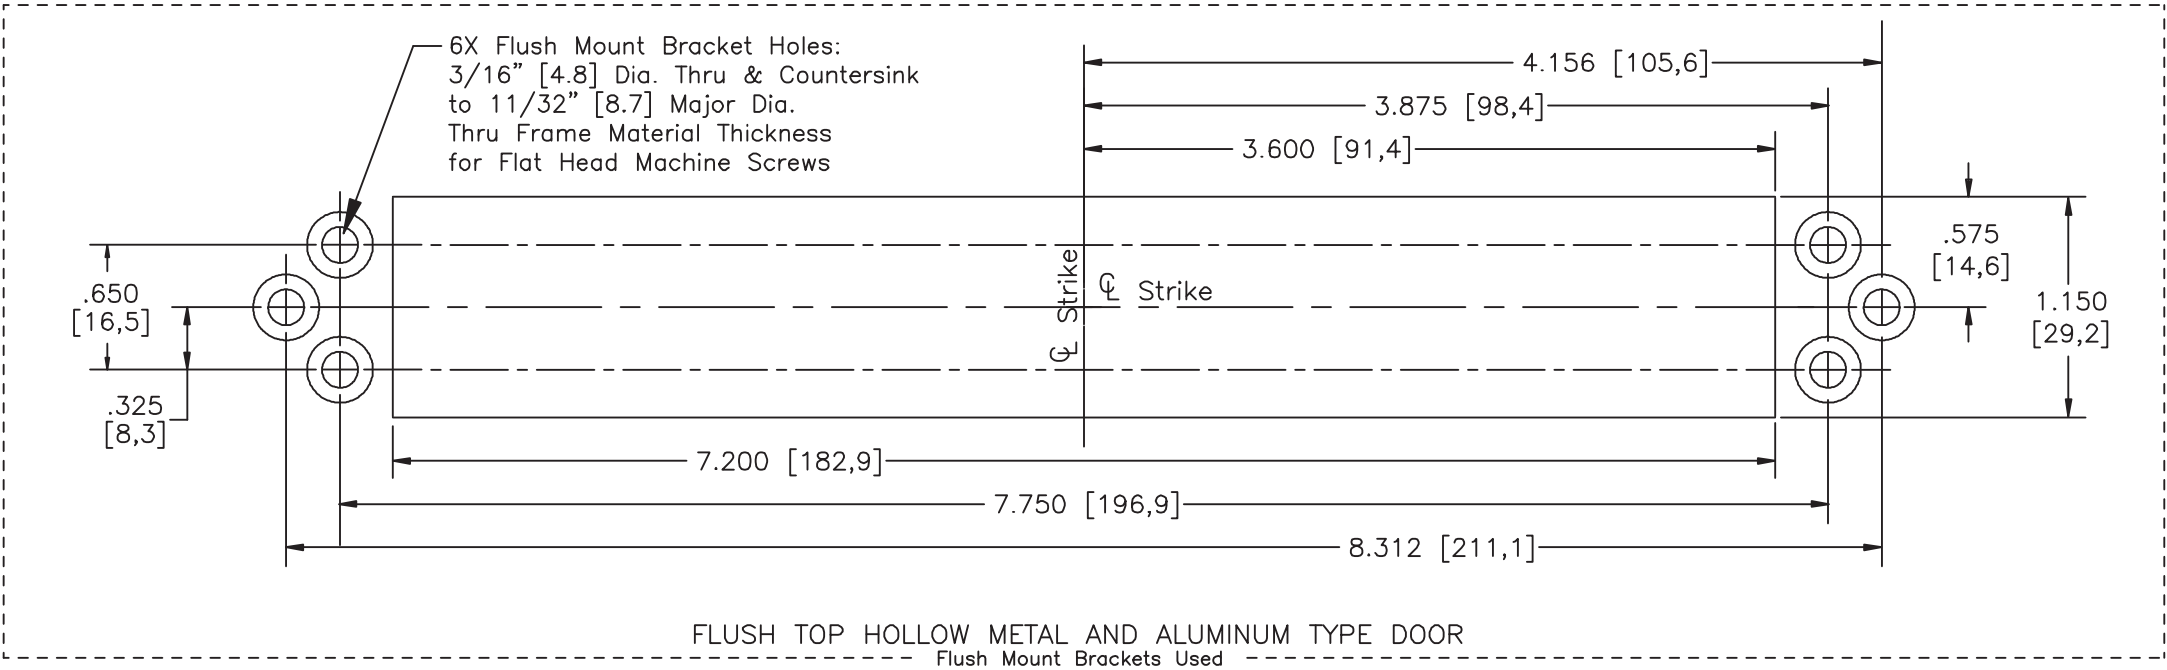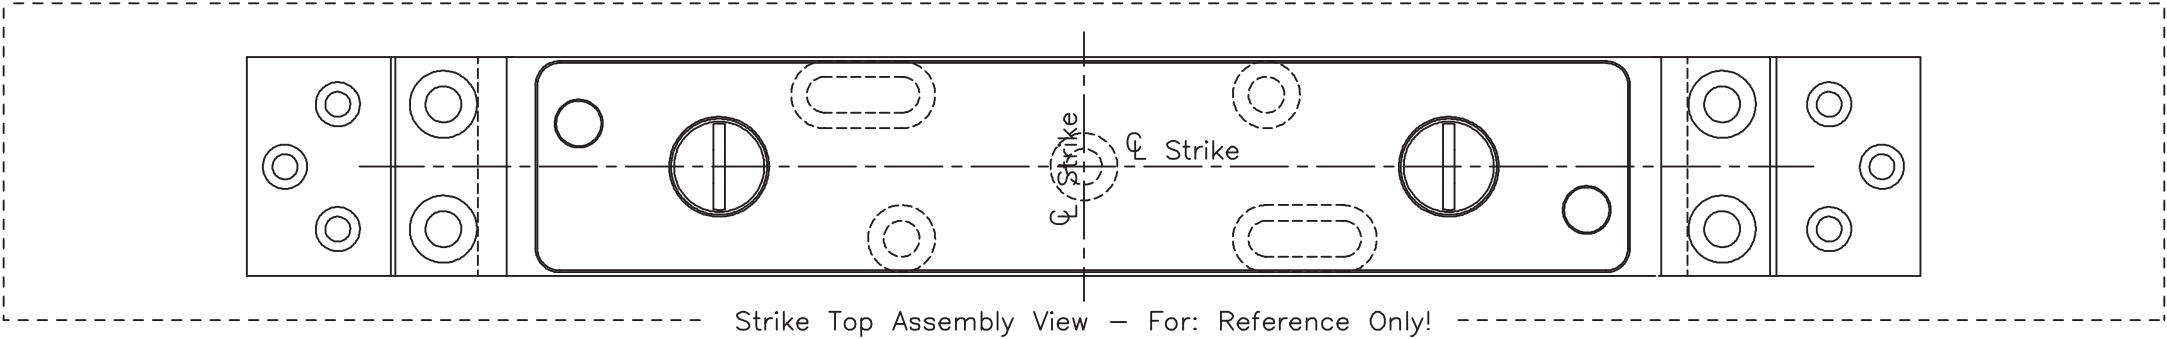

DIMENSIONS WITHIN BRACKETS [XX,X] REPRESENT METRIC MEASUREMENT IN MILLIMETERS
DO NOT PHOTOCOPY TEMPLATE (scale may be affected)